



70334

48" Farm Jack

OPERATING INSTRUCTIONS


TO RAISE LOAD

1. Place the foot of the jack securely beneath the load.
2. Lift the reversing latch to it's UP position and ensure it's locked in place.
3. Jack the nose up until it comes in contact with load.
4. Check to ensure nothing will obstruct a clean lift.
5. Pull down firmly and steadily on handle to raise load. The climbing pin will "click."
6. Relax handle allowing pin to support load.
7. Raise handle to the top of its stroke and pull again.


TO LOWER LOAD

IMPORTANT: THE JACK MUST BE LOADED WITH A MINIMUM OF 110 LBS. TO LOWER STEP BY STEP, OTHERWISE THE LIFTING NOSE WILL DROP.

1. Jack the load up slightly and ensure handle is in its fully upright position.
2. Trip the reversing latch so that it is in the DOWN position.
3. Keeping a firm grip on the handle, steady pump just as you would to raise a load.

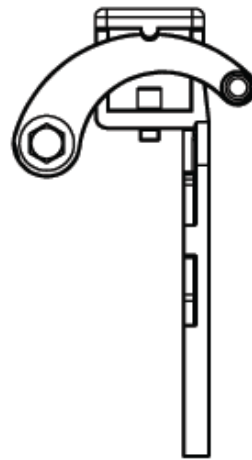

**UP
POSITION**

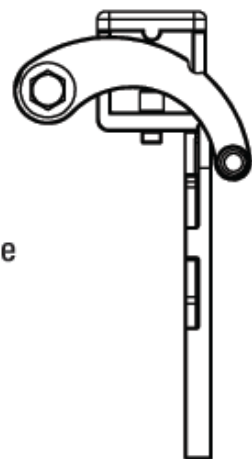

**DOWN
POSITION**